

ENG / SLO / CRO



 UVI GEAR

# GREED MINI

## Box Contents

1. UVI Gear Greed Mini Mem-chanical RGB Keyboard
2. User Manual

## System Requirements

1. Operating System Windows XP/7/8/10 or macOS
2. One free USB 2.0/3.0 port



User Manual



Navodila za uporabo



Korisnički priručnik

# Instructions / Navodila / Upute

## Instructions


Thank you for purchasing UVI Gear Greed Mini keyboard. UVI Greed Mini is a "plug and play" keyboard with mem-chanical switches. You do not need any drivers.

## Navodila

Zahvaljujemo se vam za nakup tipkovnice UVI Gear Greed Mini. UVI Greed Mini je "plug and play" tipkovnica z membransko-mehanskimi stikali. Za uporabo ne potrebujete gonilnikov.

## Upute

Hvala vam što ste kupili UVI Gear Greed Mini tipkovnicu. UVI Greed Mini je "plug and play" tipkovnica s membransko-mehaničkim prekidačima. Za upotrebu vam nisu potrebni nikakvi upravljački programi.

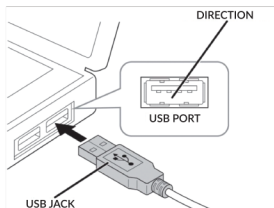

# Game mode / Igralni način / Igrački način




Windows  
Key Lock





Switch between  
arrow keys and  
WASD keys



## Lighting modes / Načini osvetlitve / Načini rasvjete

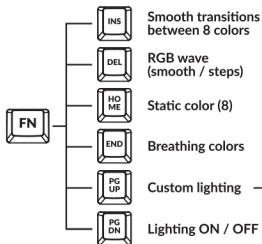

### How to record your custom lighting

  

## Multimedia / Multimedija / Multimedija

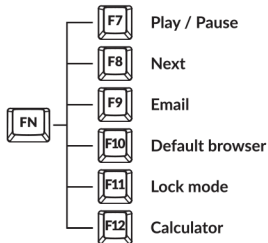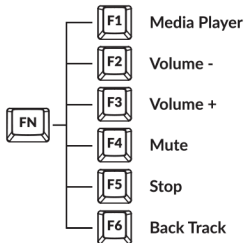

# Specifications / Specifikacije / Tehnički podaci

## Technical specifications

Number of keys: 88

Polling rate: 1000 Hz

Switch: actuation force 45 g

Size: 352 x 130 x 40 mm

Lifetime: 8 million clicks

Cable: nylon copper, 155 cm

## Tehnične specifikacije

Število tipk: 88

Javljalna frekvenca: 1000 Hz

Stikalo: sprožilna sila 45 g

Dimenzije: 352 x 130 x 40 mm

Življenjska doba: 8 milijonov klikov

Kabel: najlonski bakreni, 155 cm

## Tehnički podaci

Broj tipki: 88

Stopa izvještavanja: 1000 Hz

Prekidač: sila aktiviranja 45 g

Dimenzije: 352 x 130 x 40 mm

Doživotno: 8 milijuna klikova

Kabel: najlonski bakreni, 155 cm

# Warning / Opozorilo / Opomena

## Warning

Do not attempt to open, service or modify the keyboard. Clean the keyboard using only a dry cloth; do not use alcohol or detergent. Keep away from water or fire and do not expose to high temperatures.

## Opozorilo

Tipkovnice ne pokušajte odpirati, popravljati ili modificirati. Tipkovnicu čistite samo s suho krpo; ne uporabljajte alkohola ali detergenta. Iznognite se stiku z vodo ali odprtim ognjem ter je ne izpostavljajte visokim temperaturam.

## Opomena

Ne pokušavajte otvarati, popravljati ili modificirati tipkovnice. Čistite tipkovnicu samo suhom krpom; ne koristite alkohol ili deterđent. Izbjegavajte kontakt s vodom ili otvorenim plamenom i ne izlađite visokim temperaturama.